1887141
O-Devonshire Side Chest

Parts and Hardware List

A.	Top Assembly	1 pc
B.	Front Legs	2 pcs
C.	Back Left Leg	1 pc
D.	Back Right Leg	1 pc
E.	Allen Head Bolts	8 pcs
F.	Lock Washers	8 pcs
G.	Flat Washers	8 pcs
H.	Allen Head Wrench	1 pc
I.	Optional Allen Head Screwdriver Bit	1 pc

* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.

Hardware Illustrations

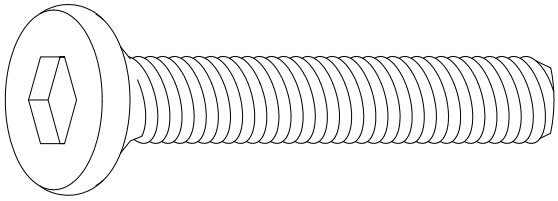

E. Allen Head Bolt

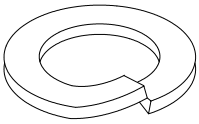

F. Lock Washer

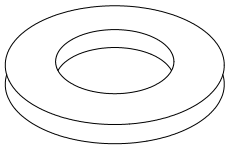

G. Flat Washer

1887141
O-Devonshire Side Chest

Assembly Instructions
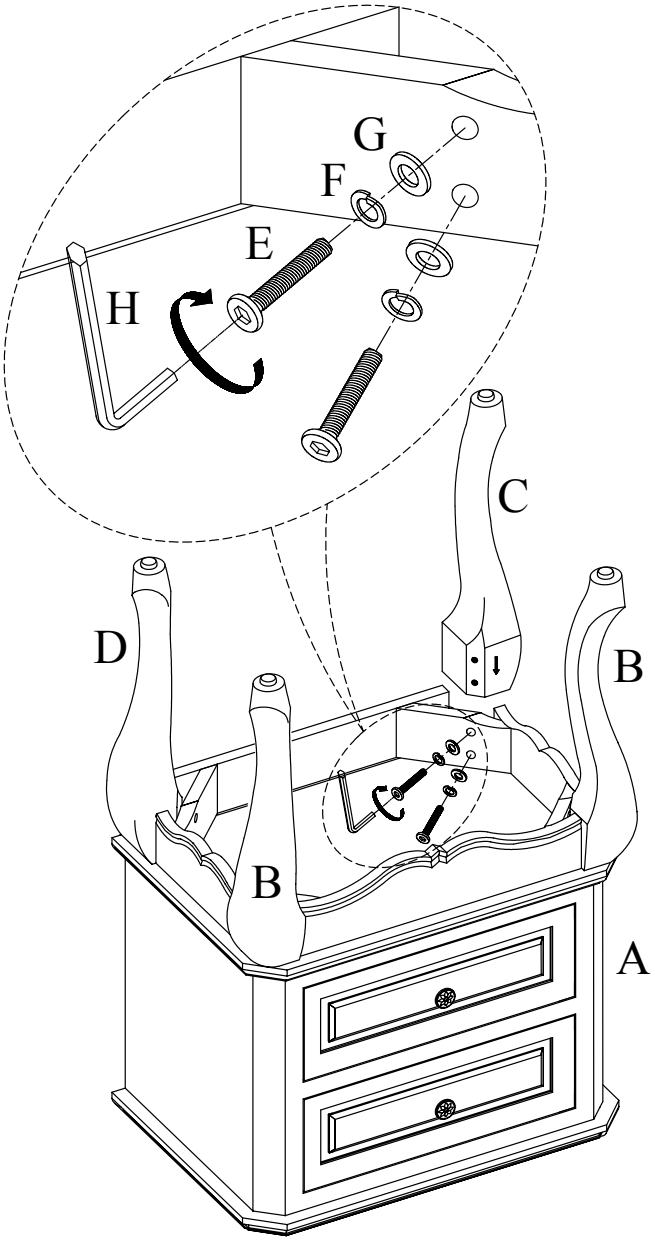
1. **Attach Legs** Place Top Assembly (A) upside down on a soft surface**.** Align the pre-drilled holes in the corner blocks of Top Assembly (A) with the pre-threaded holes in the Front Legs (B) and Back Left & Right Legs (C, D). Secure with Allen Head Bolts (E), Lock Washers (F) and Flat Washers (G) using Allen Head Tool (H or I). See illustration.